HOME
DECORATORS
COLLECTION

BF-25144 OPEN WALL MOUNTED STORAGE 34″H×21″W

INV#16064

ASSEMBLY INSTRUCTIONS

Made In China

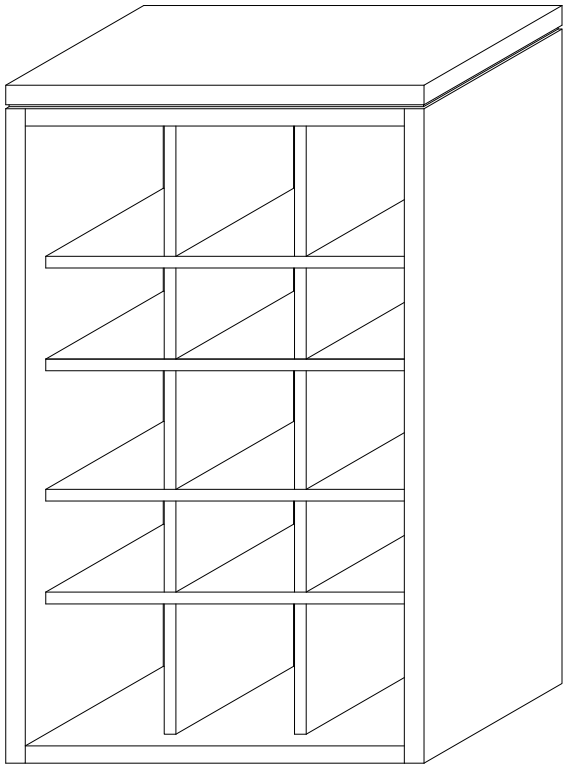

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D  ADORNING PANEL-1PC	E 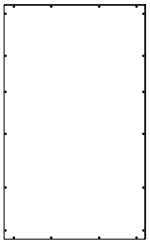 BACK PANEL-1PC	F  STAND PANELS-2PCS
G  ACORSS PANELS-2PCS	H  STAND PANELS-4PCS	I ACROSS PANELS-2PCS
J  STAND PANELS-2PCS	K  STAND PANELS-2PCS	L  BOTTOM PANEL-1PC

M CAM-TOOL-1PC	N  CAM-BOLTS-24PCS	O CAM-LOCKS-24PCS
P 7mm × 5/8"  SCREWS-20PCS	Q  DOWELS-40PCS	R  SHEETIRONS-2PCS
S 6mm × 5/8"  SCREWS-5PCS	T  GECKOS-5PCS	U 8mm × 1-1/2" 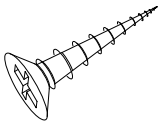 SCREWS-5PCS
V 8mm × 1" 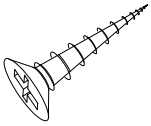 SCREWS-3PCS	W 8mm × 1-1/4" 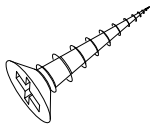 SCREWS-8PCS	X 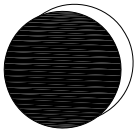 EVA PADS-2PCS
Y CAM-LOCK CAPS-4PCS		

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

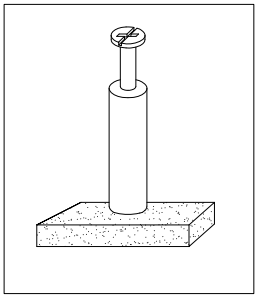

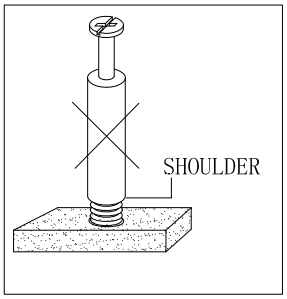

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

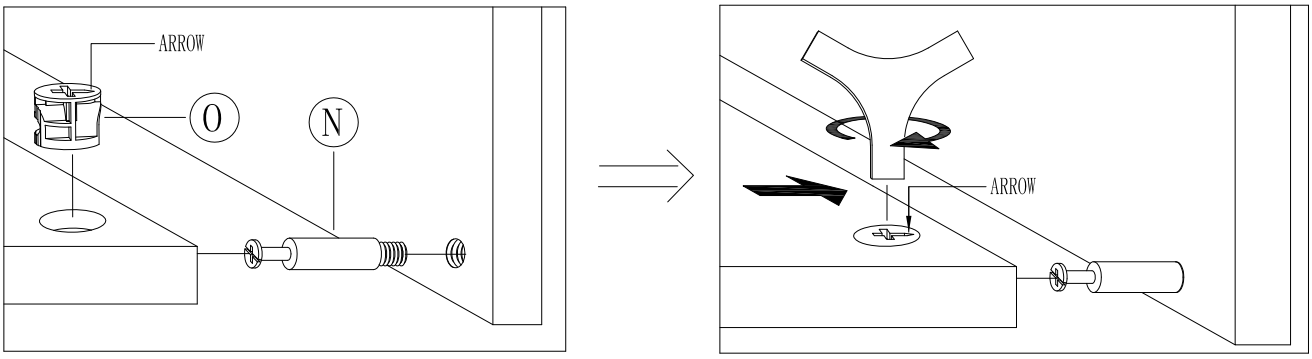

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

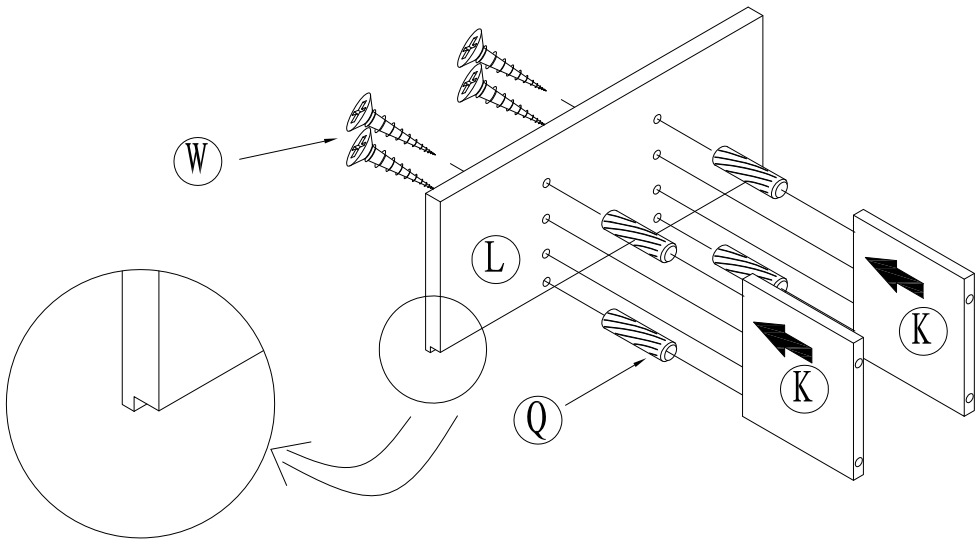

1). ASSEMBLE THE BOTTOM PANEL(L).

- INSERT 4 DOWELS(Q) INTO THE HOLES IN THE BOTTOM PANEL(L).
- ATTACH THE STAND PANELS(K) TO BOTTOM PANEL(L) USING 4 SCREWS(W).

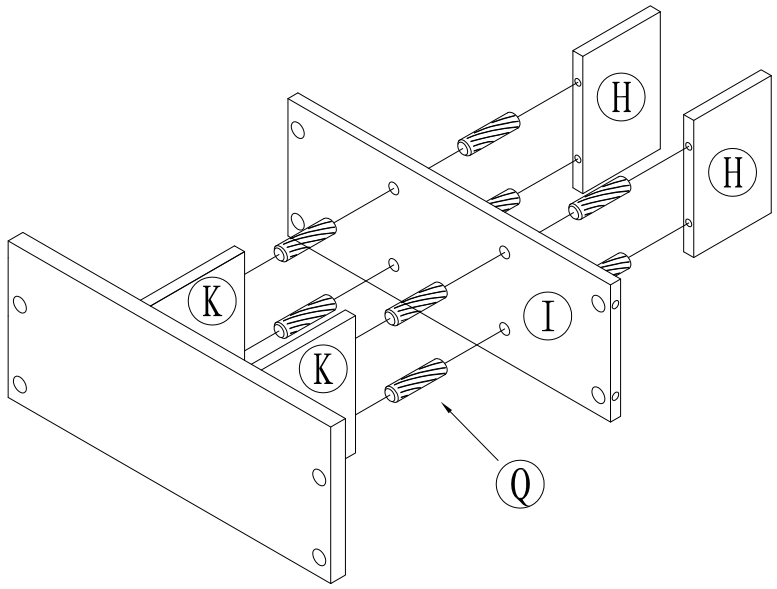

2). ASSEMBLE THE ACROSS PANEL(I).

- INSERT THE 8 DOWELS(Q) INTO THE HOLES IN THE ACROSS PANEL(I).
- ATTACH THE STAND PANELS(H/K) TO ACROSS PANEL(I).

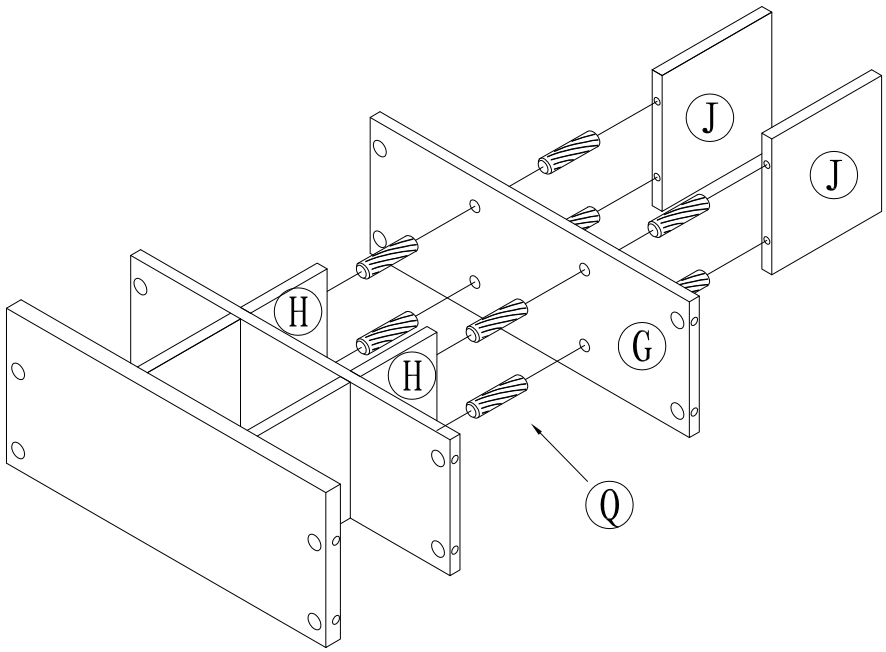

3). ASSEMBLE THE ACROSS PANEL(G).

- INSERT THE 8 DOWELS(Q) INTO THE HOLES IN THE ACROSS PANEL(G).
- ATTACH THE STAND PANELS(J/H) TO ACROSS PANEL(G).

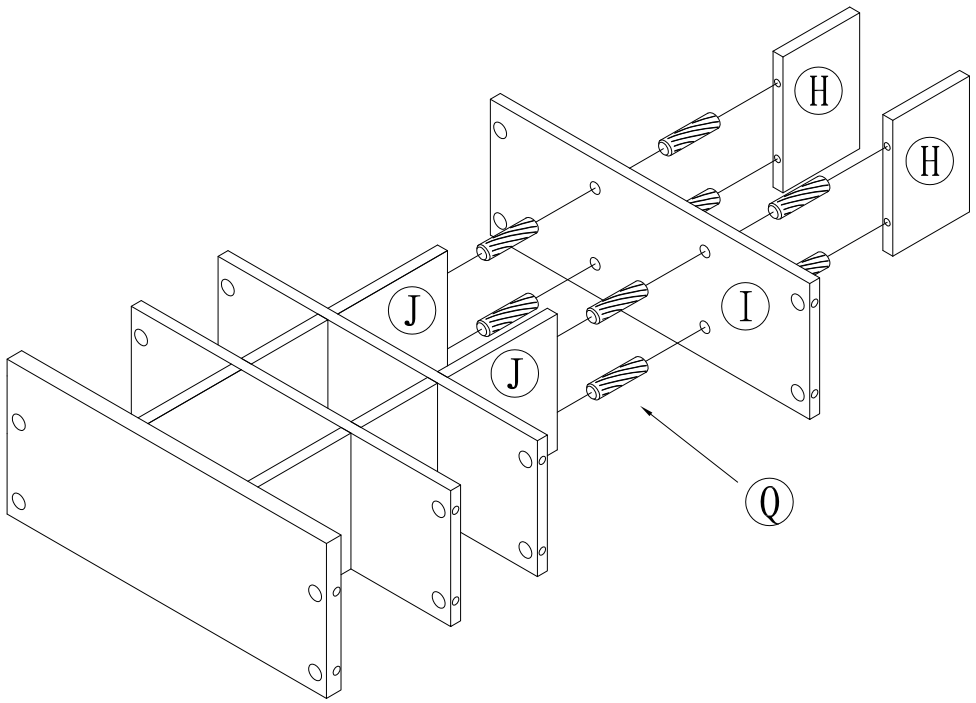

4). ASSEMBLE THE ACROSS PANEL(I).

- INSERT THE 8 DOWELS(Q) INTO THE HOLES IN THE ACROSS PANEL(I).
- ATTACH THE STAND PANELS(H/J) TO ACROSS PANEL(I).

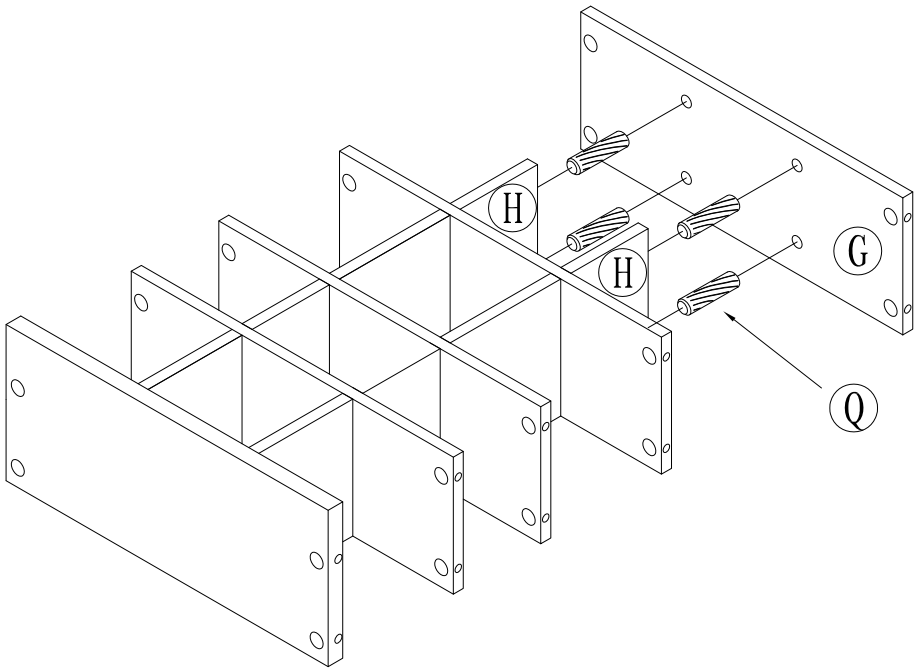

5). ASSEMBLE THE ACROSS PANEL(G).

- INSERT THE 4 DOWELS(Q) INTO THE HOLES IN THE ACROSS PANEL(G).
- ATTACH THE STAND PANEL(H) TO ACROSS PANEL(G).

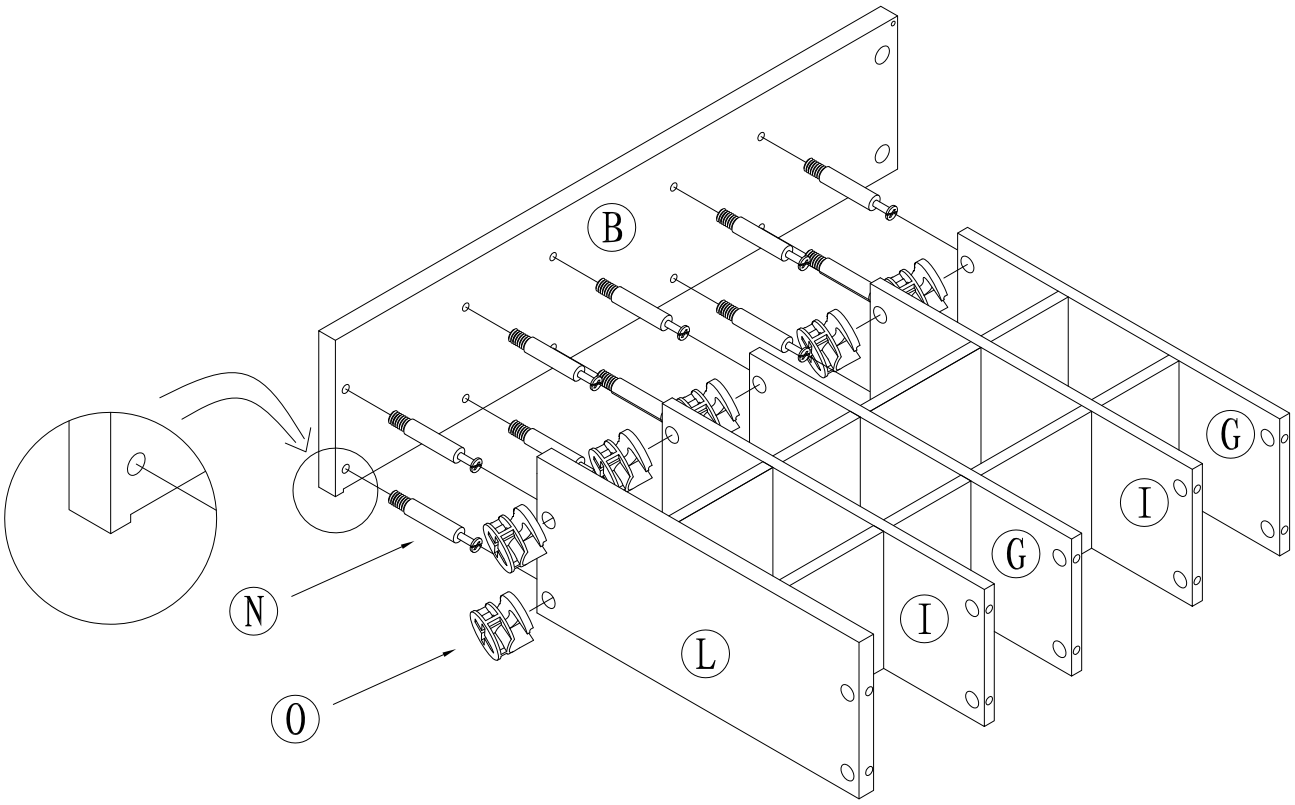

6). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE THE 10 CAM-BOLTS(N) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE CAM-BOLTS(N) INTO THE HOLES IN THE PANEL(I/L/G) AND ATTACH USING 10 CAM-LOCKS(O).

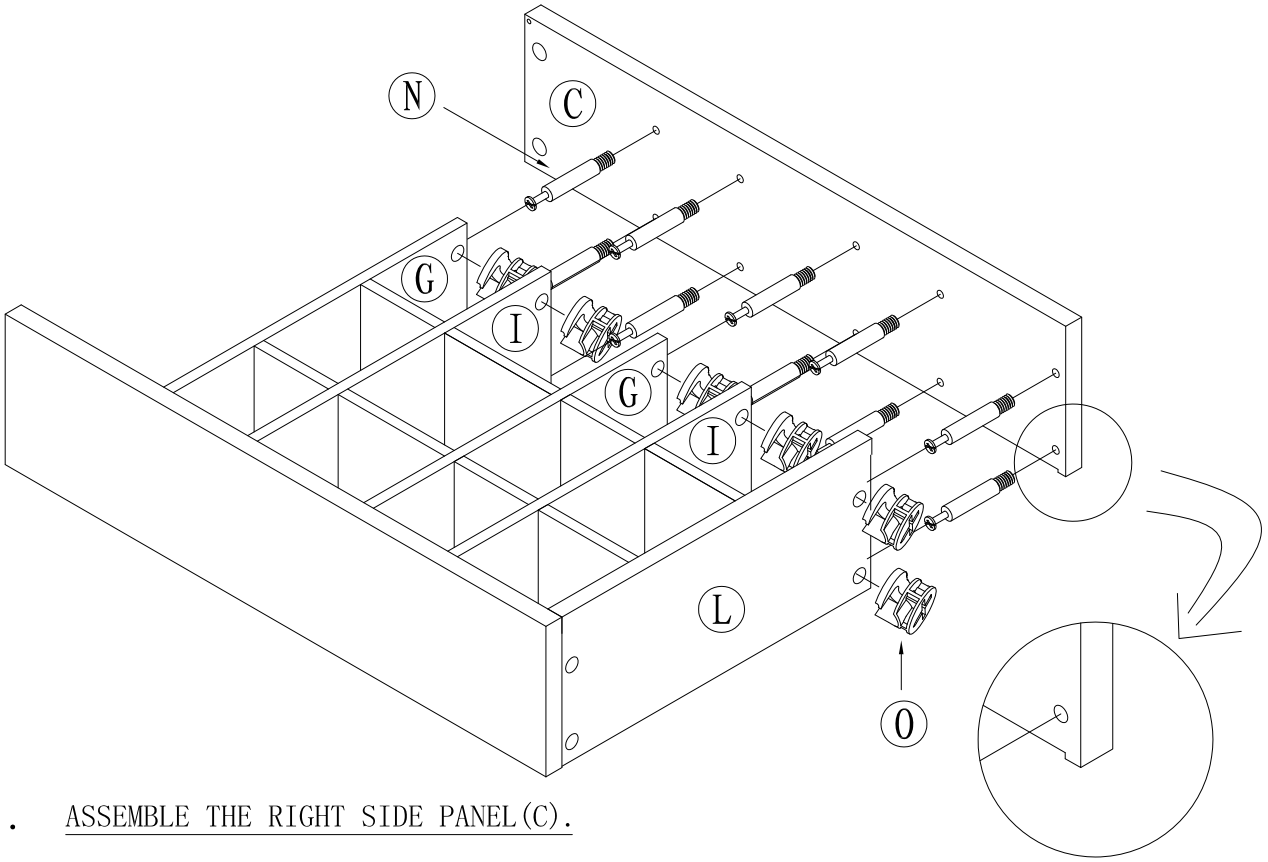

7). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE THE 10 CAM-BOLTS(N) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE CAM-BOLTS(N) INTO THE HOLES IN THE PANEL(G/I/L) AND ATTACH USING 10 CAM-LOCKS(O).

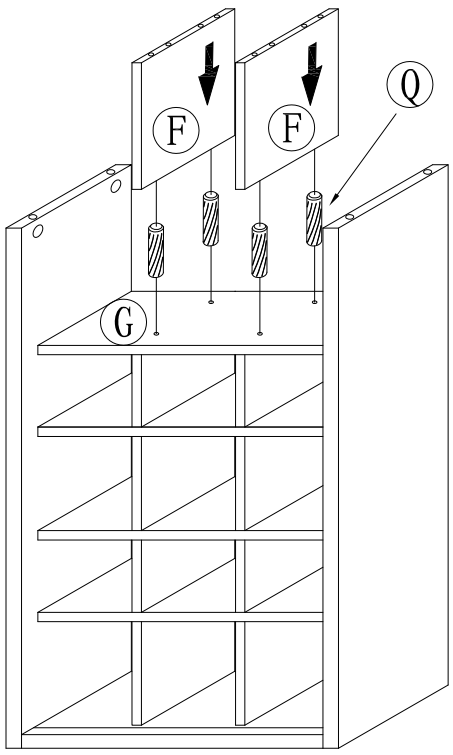

8). ASSEMBLE THE STAND PANEL(F).

- INSERT THE 4 DOWELS(Q) INTO THE HOLES IN THE ACROSS PANEL(G).
- ATTACH THE STAND PANELS(F) TO ACROSS PANEL(G).

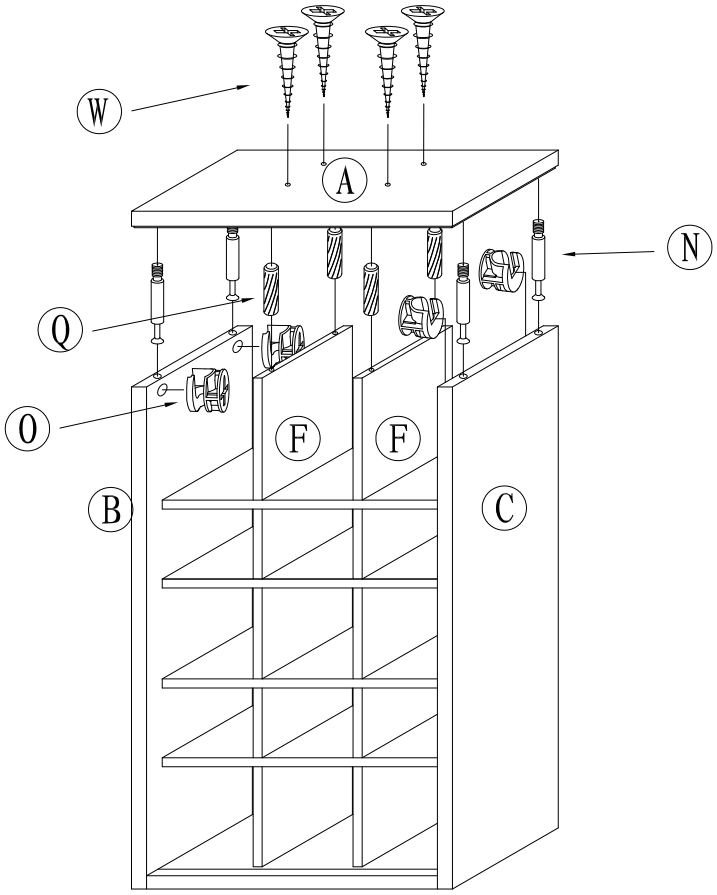

9). ASSEMBLE THE TOP PANEL(A).

- ROTATE THE 8 CAM-BOLTS(N) INTO THE HOLES IN THE TOP PANEL(A).
- INSERT 4 DOWELS(Q) INTO THE HOLES IN THE PANEL(F).
- PLACE CAM-BOLTS(N) INTO THE HOLES IN THE PANEL(B/C/F) AND ATTACH USING 4 CAM-LOCKS(O).
- ROTATE 4 SCREWS(W) INTO THE HOLES IN THE TOP PANEL(A).

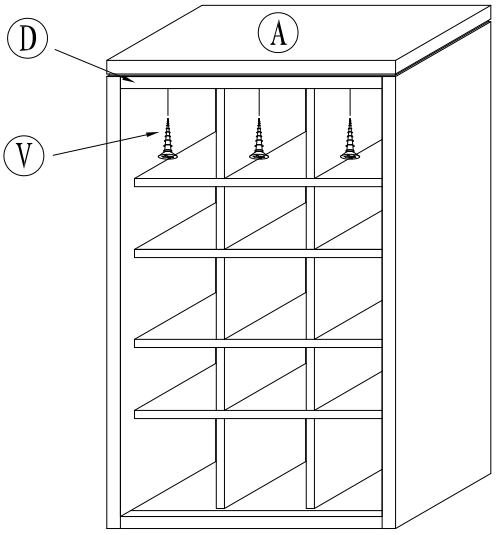

10). ASSEMBLE THE ADORNING PANEL(D).

- ATTACH THE ADORNING PANEL(D) TO PANEL(A) USING 3 SCREWS(V).

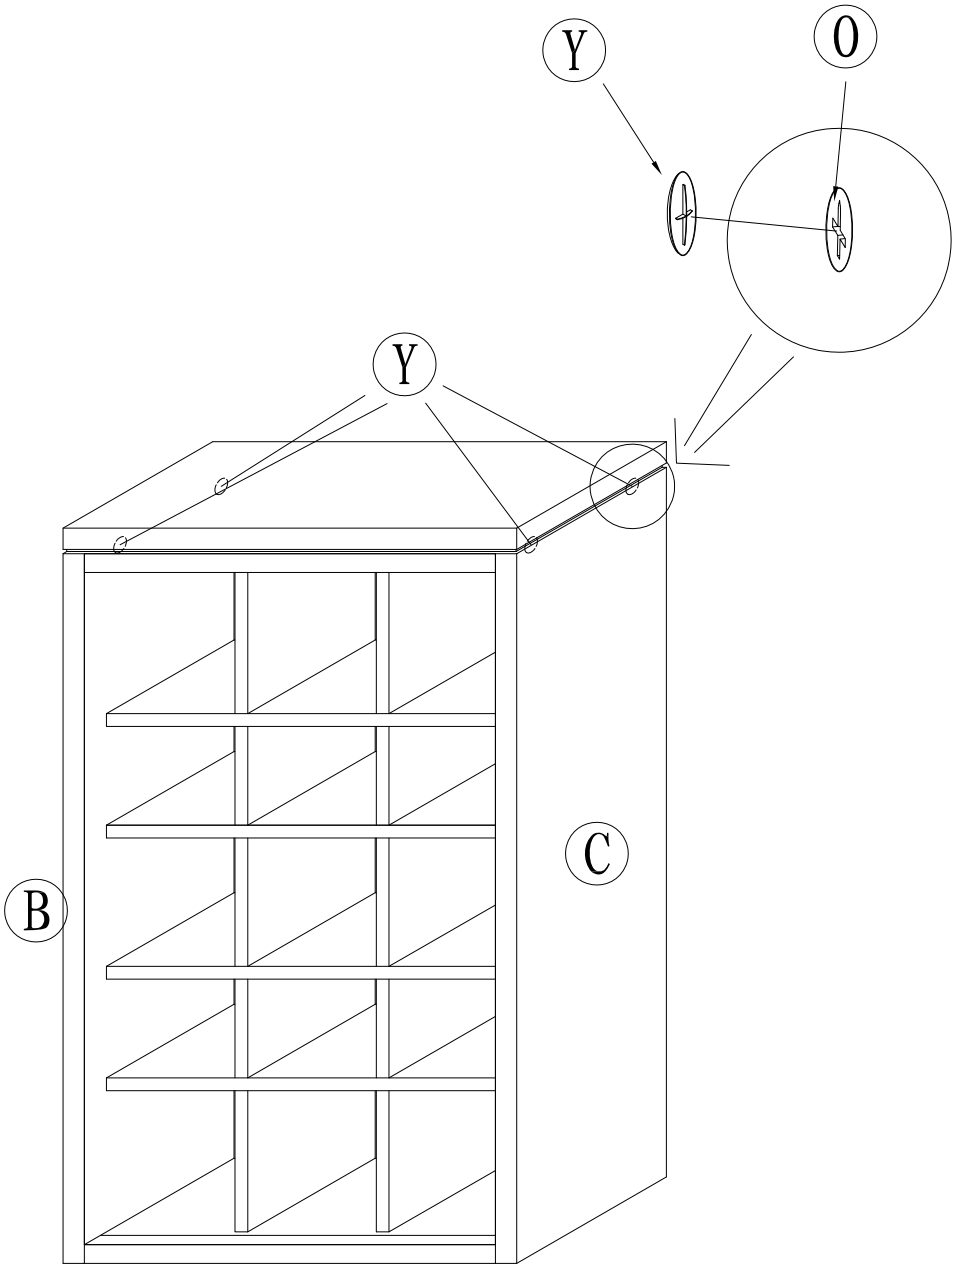

11). ASSEMBLE THE CAM-LOCK CAPS(Y).

- ATTACH THE 4 CAM-LOCK CAPS(Y) ONTO THE 4 CAM-LOCKS(O).

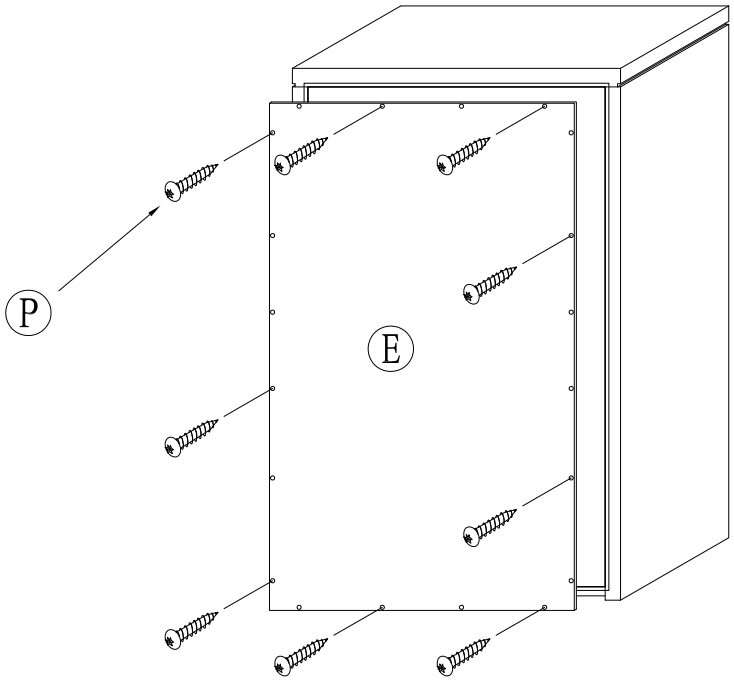

12). ASSEMBLE THE BACK PANEL(E).

- ATTACH THE BACK PANEL(E) USING 20 SCREWS(P).

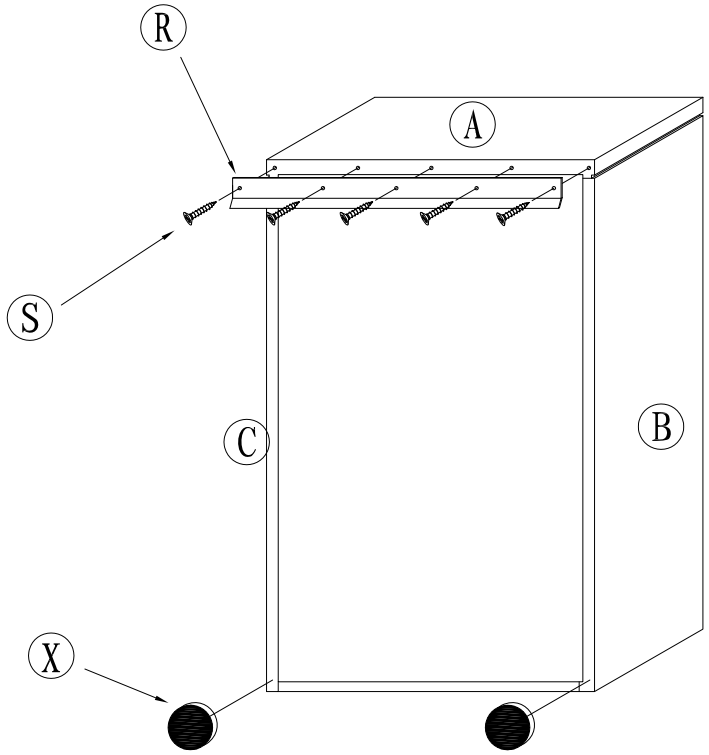

13). ASSEMBLE THE SHEETIRON(R).

- ATTACH THE SHEETIRON(R) TO TOP PANEL(A) USING 5 SCREWS(S).
- ATTACH 2 EVA PADS(X) TO SIDE PANEL(B/C).

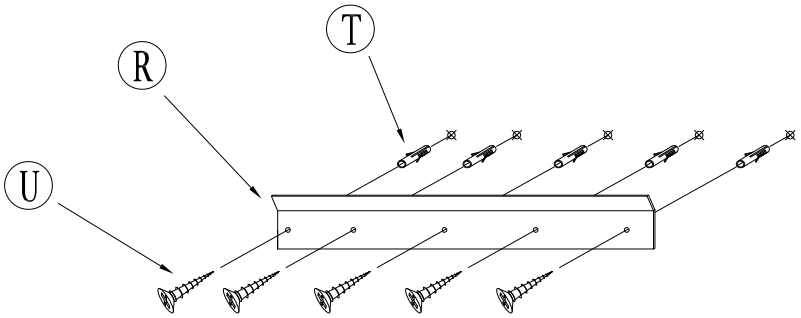

wall

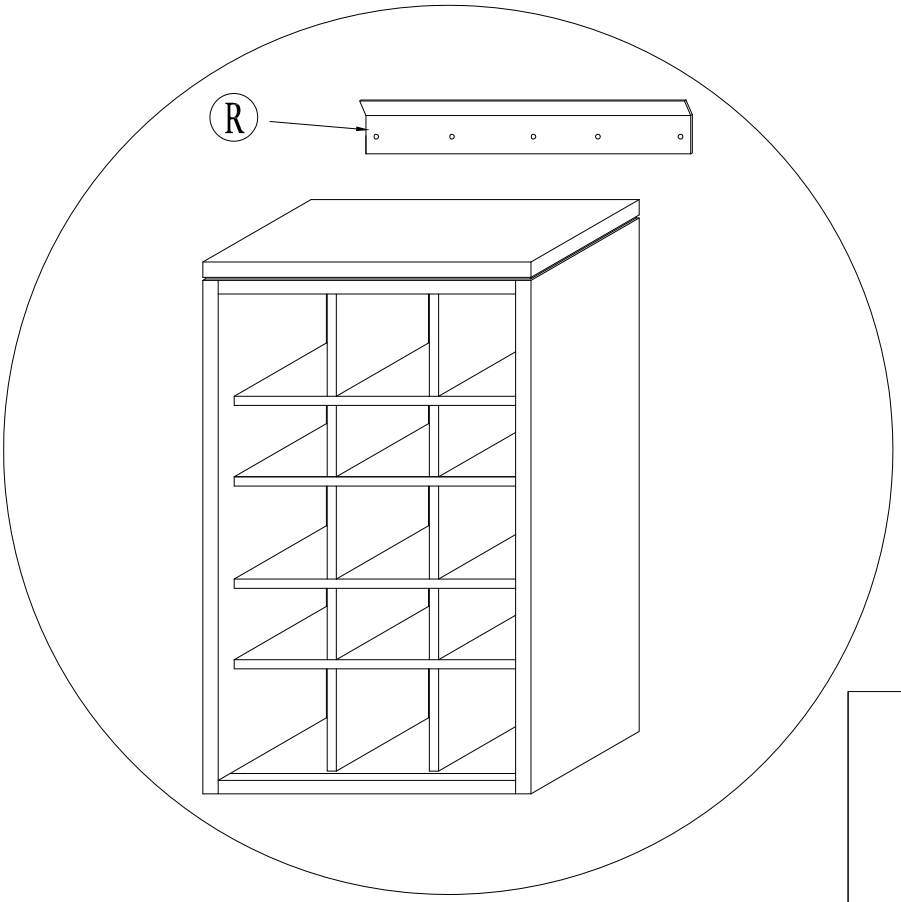

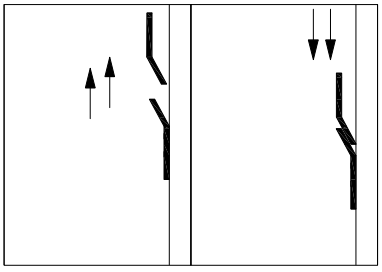

14).ASSEMBLE THE GECKOS(T).

- DRILL 5 HOLES INTO THE WALL, PLEASE REFER TO THE REAR BACK PANEL'S HOLE DISTANCE AND HEIGHT.
- TAP 5 GECKOS(T) INTO THE HOLES ON THE WALL. THEN ROTATE 5 SCREWS(U) INTO THE GECKOS(T).
- HANG THE CABINET ONTO THE SHEETIRON(R).